
Load Rating Chart

Model 22101S




© Manitex 2000

NOTE: Additional copies of this Load Rating Chart can be purchased from your Manitex Distributor. When ordering, use the part number shown in the bottom left corner of this page.

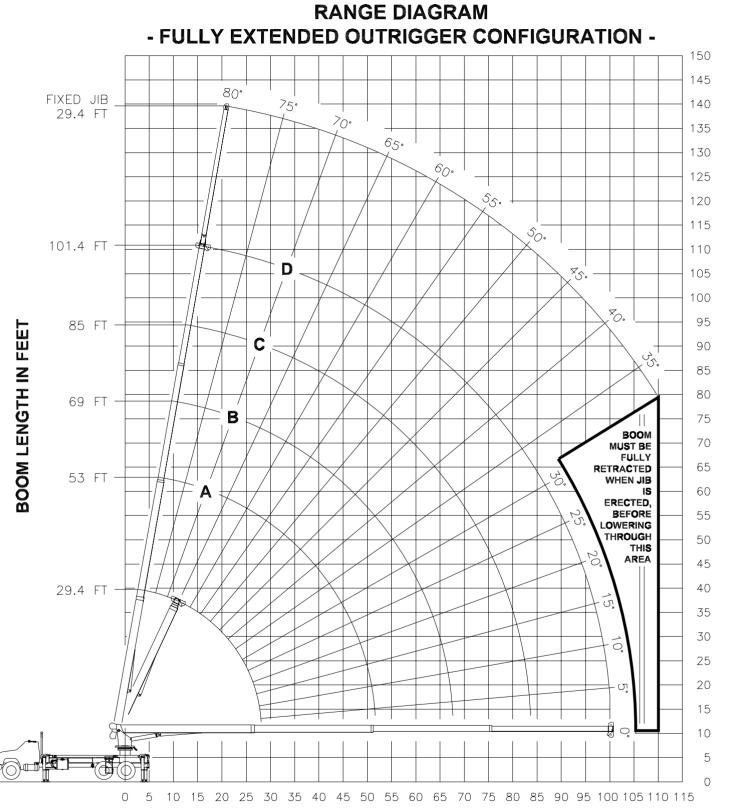

OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET

USE THIS CHART ONLY
WHEN ALL
OUTRIGGERS ARE
FULLY EXTENDED

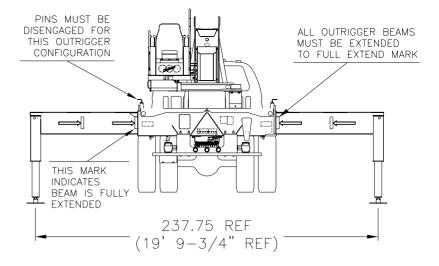


- FULLY EXTENDED OUTRIGGER CONFIGURATION -

MAIN BOOM LOAD RATINGS IN LBS									JIB LOAD RATINGS IN LBS				
LMI CODE #1										LMI CODE #2			
RAD-US OPERAT	San San Care					2ND 3RD 1ST BASE						BOOM AZ	29.4 FT JIB FOR ALL BOOM LENGTHS
N F G T						В		С		D		DG	SEE WARNING NOTE 4
G T	<u> </u>	29.4 FT	<u> </u>	53 FT	6	69 FT	<u>/</u>	85 FT	6	101.4 FT	N F G T		RATED LOAD IN
5	80	44000										<u> </u>	POUNDS
8	74	33540									8		
10	70	28140									10		
12	66	24230	78	14000							12		
14	61	20460	76	14000	80	14000					14		
17	54	16400	72	14000	78	12880					17		
20	46	13520	69	13700	75	11430	79	8920			20		
25	29	10210	63	10600	71	9460	75	8000	79	6000	25		
30			56	8390	66	8210	72	7070	76	5500	30	80	3000
35			49	6790	61	6890	68	6130	73	4980	35	78	2840
40			41	5590	56	5700	65	5320	70	4490	40	76	2620
45			31	4640	51	4760	61	4640	67	4000	45	73	2420
50			17	3880	45	4000	57	4070	64	3580	50	71	2230
55					38	3380	52	3450	61	3200	55	69	2020
60					30	2860	47	2930	57	2850	60	67	1840
65				,	19	2410	42	2490	54	2520	65	64	1670
70							36	2090	50	2130	70	62	1520
75							29	1740	45	1790	75	59	1380
80							20	1440	41	1500	80	56	1230
85									36	1240	85	53	1080
90									30	1020	90	50	950
95									22	820	95	47	830
100											100	44	720
105											105	40	570
110											110	36	430
	34	40 LBS.	19	O LBS.	15	0 LBS.	12	0 LBS.	1	00 LBS.	DEDU	CTION	IS FOR STOWED JIB

HEIGHT ABOVE GROUND IN FEET


RANGE DIAGRAM - INTERMEDIATE OUTRIGGER CONFIGURATION (MID EXTEND)

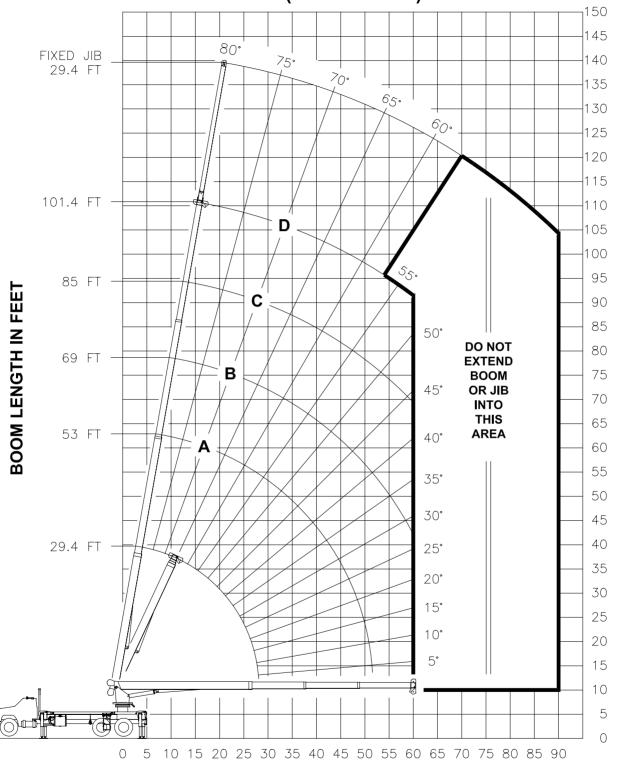

OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET

NOTE: LIFTING PERSONNEL WITH CRANE IN THIS OUTRIGGER CONFIGURATION IS STRICTLY PROHIBITED. USE ONLY FULLY EXTENDED OUTRIGGER CONFIGURATION WHEN LIFTING PERSONNEL.


USE THIS CHART ONLY
WHEN ALL
OUTRIGGERS ARE IN
THE INTERMEDIATE
POSITION

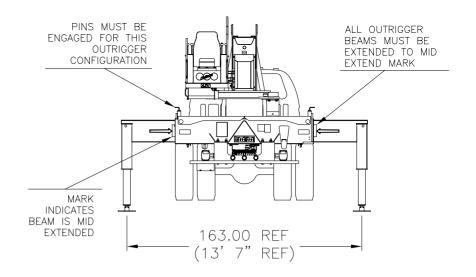

- INTERMEDIATE OUTRIGGER CONFIGURATION - (MID EXTEND)

MAIN BOOM LOAD RATINGS IN LBS										JIB LOAD RATINGS IN LBS			
LMI CODE #9											LMI	CODE #10	
O P E R A T	LMI CODE #9 SPAN BONN BASE BASE BASE C D											BOO AM DE A	29.4 FT JIB FOR ALL BOOM LENGTHS
N F				Α	В		С		D		A U T S	D N	SEE WARNING NOTE 4
GT	<u>/</u>	29.4 FT	6	53 FT	<u>/</u>	69 FT	6	85 FT	<u>/</u>	101.4 FT	N F G T		D. T. T. D. L. D.
5	80	44000										<u> </u>	RATED LOAD IN POUNDS
8	74	33540									8		
10	70	28140									10		
12	66	24230	78	14000							12		
14	61	20460	76	14000	80	14000					14		
17	54	14040	72	14000	78	12880					17		
20	46	10190	69	10690	75	10820	79	8920			20		
25	29	6560	63	7050	71	7170	75	7240	79	6000	25		
30			56	4970	66	5090	72	5160	76	5210	30	80	3000
35			49	3630	61	3750	68	3810	73	3860	35	78	2840
40			41	2690	56	2810	65	2870	70	2910	40	76	2620
45			31	1990	51	2110	61	2180	67	2220	45	73	2310
50			17	1450	45	1570	57	1640	64	1680	50	71	1770
55					38	1150	52	1220	61	1260	55	69	1350
60					30	800	47	870	57	910	60	67	1000
65											65	64	710
70											70	62	470
	340 LBS. 190 LBS.			00 LBS.	150 LBS. 120 LBS. 100				00 LBS.	DEDU	CTION	IS FOR STOWED JIB	


RANGE DIAGRAM - FULLY RETRACTED OUTRIGGER CONFIGURATION -

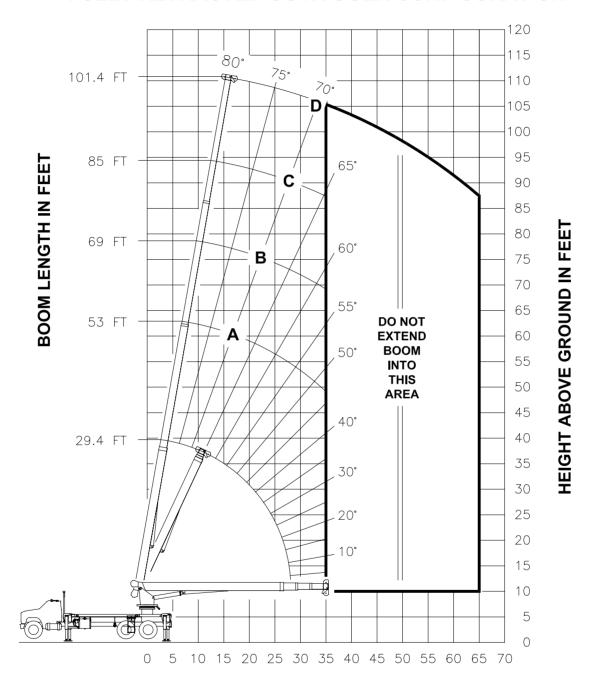


OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET


NOTE: LIFTING PERSONNEL WITH CRANE IN THIS OUTRIGGER CONFIGURATION IS STRICTLY PROHIBITED. USE ONLY FULLY EXTENDED OUTRIGGER CONFIGURATION WHEN LIFTING PERSONNEL.


USE THIS CHART
ONLY WHEN ALL
OUTRIGGERS ARE
FULLY RETRACTED

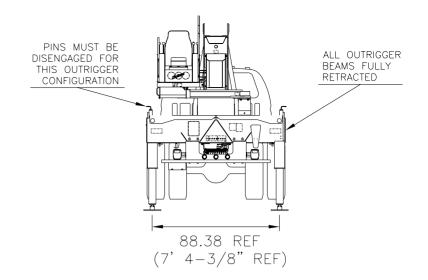

- FULLY RETRACTED OUTRIGGER CONFIGURATION -

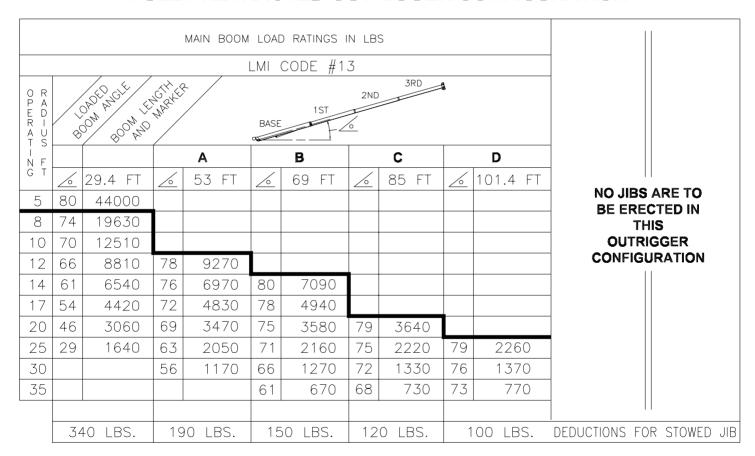

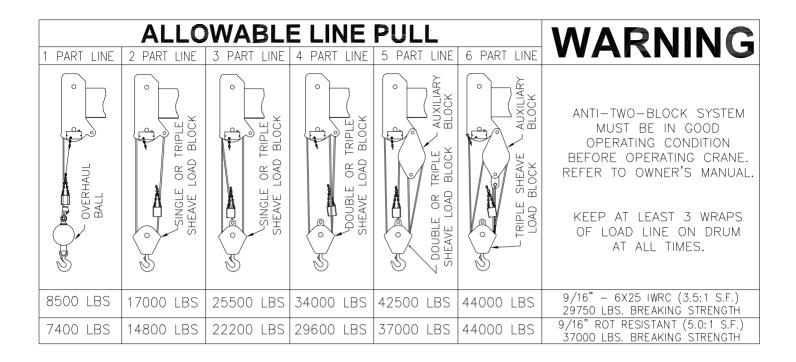

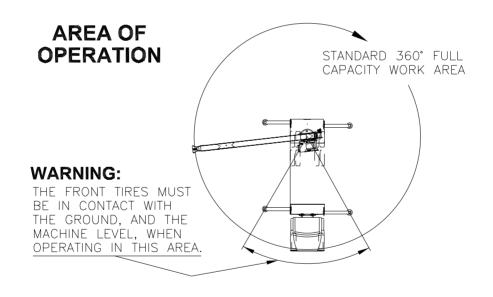

DEDUCTIONS FROM RATED LOADS FOR LOAD HANDLING DEVICES SUPPLIED BY MANITEX

AUXILIARY BLOCK	— — — — — — 50 LBS
OVERHAUL BALL	SEE OVERHAUL BALL MANUFACTURER NAMEPLATE
LOAD BLOCK	SEE BLOCK MANUFACTURER NAMEPLATE
HOSE REEL	— — — — — — — — 160 LBS
SWING AROUND JIB	— — — — — - SEE LOAD CHART

LMI OPERATING CODES

<u>S</u>	ETTING CRANE CONFIGURATION	<u> </u>	ITRIGGER CONFIGURATION
	#1 MAIN BOOM		
	#5—— PERSONNEL LIFTING PLATFORM ON MAIN BOOM ——————————————————————————————————		FULLY EXTENDED FULLY EXTENDED
	#9 MAIN BOOM		
	#13 — MAIN BOOM — — — — — — — — — — —		FULLY RETRACTED

WARNING

- 1. THE OPERATOR MUST READ AND UNDERSTAND THE OWNER'S MANUAL BEFORE OPERATING THIS CRANE.
- 2. POSITIONING OR OPERATION OF CRANE BEYOND AREAS SHOWN ON THIS CHART IS NOT INTENDED OR APPROVED EXCEPT WHERE SPECIFIED IN OWNER'S MANUAL.
- 3. LOADED BOOM ANGLES AT SPECIFIED BOOM LENGTHS GIVE ONLY AN APPROXIMATION OF THE OPERATING RADIUS. THE BOOM ANGLE BEFORE LOADING SHOULD BE GREATER TO ACCOUNT FOR DEFLECTIONS. DO NOT EXCEED THE OPERATING RADIUS FOR RATED LOADS.
- 4. THE OPERATING RADIUS SHOWN IN THE JIB RATING CHART IS FOR FULLY EXTENDED BOOM ONLY. WHEN BOOM IS NOT FULLY EXTENDED, USE ONLY LOADED BOOM ANGLE TO DETERMINE LOAD RATING OF JIB.
- 5. FOR BOOM ANGLES NOT SHOWN ON JIB LOAD RATING CHART, USE RATING OF NEXT LOWER BOOM ANGLE.
- 6. FOR BOOM LENGTHS NOT SHOWN, USE RATING OF NEXT SHORTER OR LONGER BOOM LENGTH, WHICHEVER IS LESS. FOR RADII NOT SHOWN, USE RATING OF NEXT LONGER RADIUS.
- 7. CRANE LOAD RATINGS ON OUTRIGGERS ARE BASED ON FREELY SUSPENDED LOADS WITH THE MACHINE LEVELED AND STANDING ON A FIRM UNIFORM SUPPORTING SURFACE. NO ATTEMPT SHALL BE MADE TO MOVE A LOAD HORIZONTALLY ON THE GROUND IN ANY DIRECTION.

WARNING (CONTINUED)

- 8. PRACTICAL WORKING LOADS DEPEND ON SUPPORTING SURFACE, WIND, AND OTHER FACTORS AFFECTING STABILITY SUCH AS HAZARDOUS SURROUNDINGS, EXPERIENCE OF PERSONNEL, AND PROPER HANDLING, ALL OF WHICH MUST BE TAKEN INTO ACCOUNT BY THE OPERATOR.
- 9. THE MAXIMUM LOAD WHICH MAY BE TELESCOPED IS LIMITED BY HYDRAULIC PRESSURE, BOOM ANGLE, AND BOOM LUBRICATION. IT IS SAFE TO ATTEMPT TO TELESCOPE ANY LOAD WITHIN THE LIMITS OF THE LOAD RATING CHART. BOOM MUST BE FULLY RETRACTED AGAINST BOOM STOPS AT ALL TIMES WHEN LIFTING MINIMUM BOOM LENGTH CAPACITY LOADS.
- 10. LIFTING OFF THE MAIN BOOM POINT WHILE THE SWING AROUND JIB IS ERECTED IS NOT INTENDED OR APPROVED.

INFORMATION

- 1. DEDUCTIONS MUST BE MADE FROM RATED LOADS FOR STOWED JIB, OPTIONAL ATTACHMENTS, HOOKS, AND LOADBLOCKS (SEE DEDUCTION CHART). WEIGHTS OF SLINGS AND ALL OTHER LOAD HANDLING DEVICES SHALL BE CONSIDERED A PART OF THE LOAD.
- 2. LOAD RATINGS ABOVE THE HEAVY LINE ARE STRUCTURALLY LIMITED CAPACITIES. LOAD RATINGS BELOW THE HEAVY LINE ARE STABILITY LIMITED CAPACITIES AND DO NOT EXCEED 85% OF TIPPING.

DEFINITIONS

- 1. OPERATING RADIUS IS THE HORIZONTAL DISTANCE FROM THE AXIS OF ROTATION TO THE CENTER OF THE VERTICAL HOIST LINE OR TACKLE WITH LOAD APPLIED.
- 2. LOADED BOOM ANGLE AS SHOWN IN THE COLUMN HEADED BY 4, IS THE INCLUDED ANGLE BETWEEN THE HORIZONTAL AND LONGITUDINAL AXES OF THE BOOM BASE AFTER LIFTING RATED LOAD AT RATED RADIUS.