

CAUTION

- 1. LOAD RATINGS SHOWN ON THIS CHART ARE MAXIMUM ALLOWABLE LOADS WITH THE OUTRIGGERS PROPERLY EXTENDED ON A FIRM LEYEL SURFACE AND THE CRANE LEVELED AND MOUNTED ON A FACTORY-RECOMMENDED TRUCK.
- 2. ALWAYS LEVEL THE CRANE WITH THE LEVEL INDICATOR LOCATED ON THE CRANE FRAME.
- THE OPERATOR MUST REDUCE LOADS TO ALLOW FOR FACTORS SUCH AS WIND. GROUND CONDITIONS. OPERATING SPEEDS AND THE EF-FECT OF FREELY SUSPENDED LOADS.
- 4. OVERLOADING THIS CRANE MAY CAUSE STRUCTURAL COLLAPSE OR INSTABILITY.
- 5. WEIGHTS OF ANY ACCESSORIES ATTACHED TO THE BOOM OR LOAD-LINE MUST BE DEDUCTED FROM THE LOAD CHART CAPACITIES.
- 6. DO NOT EXCEED JIB CAPACITIES AT ANY REDUCED BOOM LENGTH.